TADJ Remote Temperature Adjustment Module

Wire code	Connection
Red	12V or 12V switched*
Black	Ground
Yellow	Controller I/O

 $[\]ast$ Connect this terminal to a 12V switched source if you would like the controller to shut off with the ignition.